

- Display for up to 6 hopper levels.
- Bargraph display for Planters.
- Direct readout for Seeds/Acre, LB/Ac,
 Section Average, % of Target and more.
- View & change up to 4 display options on one screen.
- Log to SD Card and Import Field Maps.
- Use up to 3 implements with the same console.
- Switch from Drill Monitoring to Yield Monitoring on any Combine.

The New **Loup Elite** Drill Monitor
provides accurate Population and
Blockage for drills, air seeders, or planters.
Log field maps to internal SD Memory,
monitor independent sections and more
through easy-to-use Touchscreen display.



3030 N. 40TH ST. • Lincoln, NE 68504
Toll Free: 877-489-5687
loupelectronics.com

EASY TOUCHSCREEN OPERATION

CUSTOMIZE 1 OF 4 SELECTABLE WINDOWS WITH THE FUCTION YOU WANT TO DISPLAY.























Set your Target Population

Live Population Readout

Monitor
Drill Sections



Up to 6 Bin Level Sensors

Average Field Population

Field & Total Acres

Configure up to 3 Implements

Enter Your Farm & Field

Select Your Crop & Hybrid

BACKWARDS COMPATIBLE WITH ALL LOUP SENSORS



Loup Population Sensor & Blockage Sensor





3030 N. 40TH ST. • Lincoln, NE 68504 Toll Free: **877-489-5687**

loupelectronics.com