

- Display for up to 6 hopper levels.
- Direct readout for Seeds/Acre, LB/Ac,
 Section Average, % of Target and more.
- View & change up to 3 display options on one screen.
- Log to SD Card and Import Field Maps.
- Use up to 3 implements with the same console.
- Switch from Drill & Planter Monitoring to Yield Monitoring on any Combine.

The New **Loup Elite** Planter Monitor provides accurate Population and more for planters. Directly replace KPM 2 and 3 monitors and Log field maps to internal SD Memory, monitor independent sections and more through easy-to-use Touchscreen display.



3030 N. 40TH ST. • Lincoln, NE 68504
Toll Free: 877-489-5687
loupelectronics.com

EASY TOUCHSCREEN OPERATION

CUSTOMIZE UP TO 3 SELECTABLE WINDOWS WITH THE FUCTION YOU WANT TO DISPLAY.























Row by Row Bar Graph Display

Live Population Readout

Monitor
Drill Sections



Up to 6 Bin Level Sensors

Average Field Population

Field & Total Acres

Configure up to 3 Implements

Enter Your Farm & Field

Select Your Crop & Hybrid

COMPATIBLE WITH PLANTERS, DRILLS & AIR SEEDERS











Blockage Sensors





3030 N. 40TH ST. • Lincoln, NE 68504 Toll Free: 877-489-5687 loupelectronics.com