Loup JP43 Scale System

Drill & Planter Scale



FEATURES

- Stand alone unit compatible with most common load cells.
- Direct readout of weight on easy to read display.
- Easy set up and calibration.
- Sends data to Loup II Monitor for in cab features of pounds per acre, acres to empty, pounds, and calculated population based on seeds per pound input.
- Indicator mounted near tank or hopper for use while filling.




2960 N 38th St. Lincoln, NE 68504 Call Toll Free: 877-489-5687 www.loupelectronics.com



PERFECT COMPANIONS

Make a drill or planter a complete system by using your Loup II with a JP43 scale. With the use of these companions the Loup II can show incab display readouts of pounds, pounds per acre, acres left in tank, and seeds per acre based on a seeds per pound input. This addition makes the Loup II the most versitile monitoring system available for drills and planters.

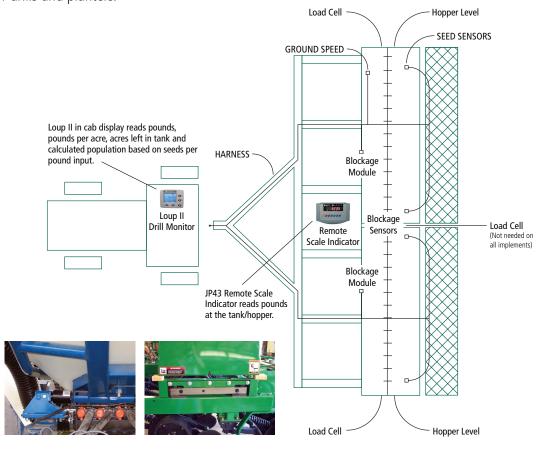



2960 N 38th St. Lincoln, NE 68504 Call Toll Free: 877-489-5687 www.loupelectronics.com